

30" LED Light Bar Mount

2005-2015 Toyota Tacoma

NOTICE: Please read instruction before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

NOTICE: Dual row light **only** fits 2005-2011 models.

Tools Needed:

14mm Wrench
Reciprocating Saw
Side Cutters
13mm wrench


Contents of a kit:

2 brackets
Installation Hardware



INSTALLATION INSTRUCTIONS:

1. Using a 14mm wrench remove the two outside factory nuts securing the bumper to the frame on each side. See **Photo 1**.

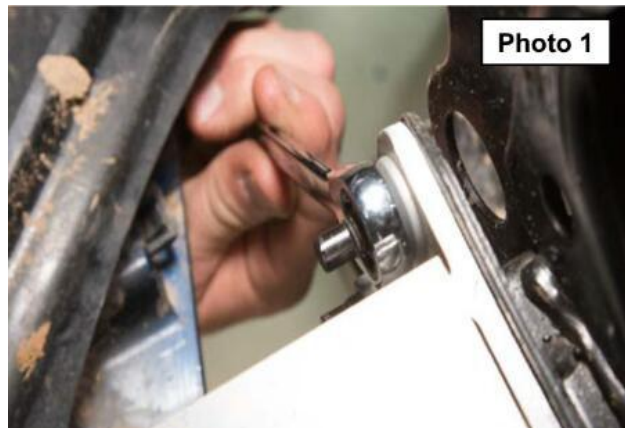

2. Using a reciprocating saw to cut the lower grille from the bumper as shown. See **Photo 2**.



3. You may also use a set of side cutters to cut the lower grille from the bumper. **See Photo 3.**
4. Remove grille. **See Photo 4.** ****NOTE**** Additional trimming may be required on 2012-2015 models.



5. Place supplied light brackets on bumper bolts.
6. Using factory hardware, tighten the nuts with a 14mm wrench. **See Photo 5.**
7. Install 30" light bar between the brackets and tighten the supplied bolts with Allen that came with the light. ****NOTE**** 2012-2015 Models will use supplied 8mm bolts to attach the light to the brackets. Tighten using a 13mm wrench.
8. Wire the light with the supplied light instruction sheet.

